



Door panel options - typically NO OSB
We sew velcro in pads and give you other side for door. Or no velcro and use vinyl flap with grommets to affix.

door measurements

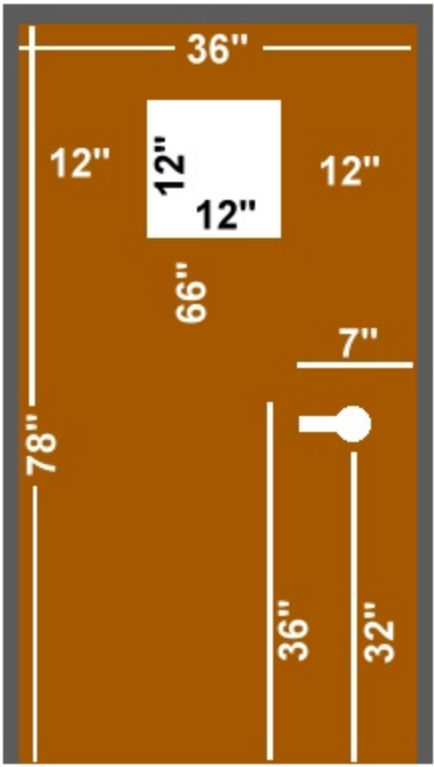

pad - typical start 4" off and leave 2" gap around so pad doesn't catch as door opens/closes

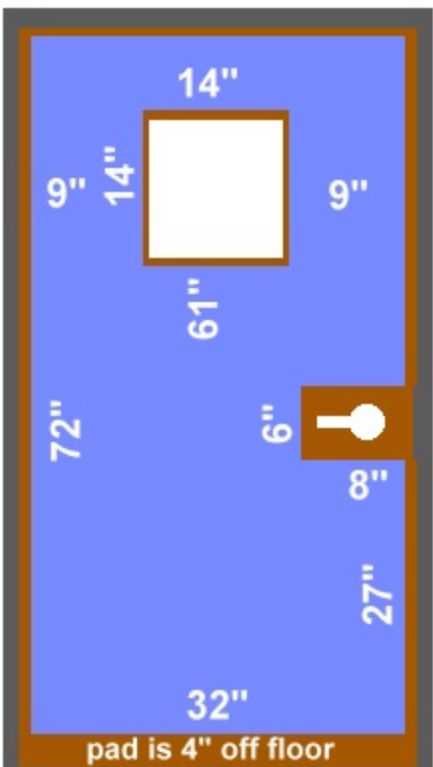

door - crash bar

padded - You have to stay well clear of crash bar for fire codes. Nothing can impede their operation.

